



Uplink mobile network

	No connection to the mobile network
	Standby
	Connecting
	Connected

Uplink SERA

	SERA switched off
	SERA connecting
	SERA standby mode
	SERA connected (normal operation)

Status LED

	Normal operation
	No connection to the internet
	Can't obtain an IP address
	Default gateway is unreachable
	DNS server is unreachable
	No connection to HOOC Cloud
	General error
	Configuration mode is active

Status Wi-Fi

	Wi-Fi off
	Wi-Fi Client connecting / Access Point not available
	Wi-Fi Client connected / Access Point off
	Wi-Fi Client connected / Access Point on
	Wi-Fi Client disconnected / Access Point on

Wi-Fi-Button

	1 Sek.	Wi-Fi Access Point On/Off
--	--------	---------------------------

Reset-Button

	1 Sek.	Enable configuration mode
	5 Sek.	Restart gateway
	15 Sek.	Reset to factory settings